

LF-H24

User Manual for Four-Light Pod V1.1



catalogue

Revise Resume 3 3

1. Product Overview 4 4

 1.1. Product Introduction 4 4

 1.2. Component Description 4 4

 1.3. Packing List 5 5

2. Technical Parameters 5 5

 2.1. Overall Parameters 5 5

 2.2. Zoom Camera 5 5

 2.3. Wide-angle Camera 6 6

 2.4. Infrared Camera 6 6

 2.5. Laser Ranging Instrument 7 7

 2.6. Cloud Platform 7 7

 2.7. Structural Shape 8 8

3. Function Introduction 8 8

 3.1. Display Mode 8 8

 3.2. Photo and Video Recording Function 8 8

 3.3. Visible Light Camera Function 9 9

 3.4. Infrared Camera 9 9

 3.5. Range Measurement Function 10 10

 3.6. Other Functions 10 10

 3.7. Pan-Tilt Function 10 10

4. Instructions for Using the Photoelectric Pod 11 11

 4.1. Structural Installation Instructions 11 11

 4.2. Description of Signal Lines 11 11

5. External Communication Protocols 12 12

6. Host Computer Tools 12 12

7. Precautions 12 12

 7.1. Daily Maintenance 13 13

 7.2. Usage Instructions 13 13

Revise resume

version number	Revision date	Revision
V1.0	2025/6/10	-First release
V1.1	2025/12/10	- updated parameter
V1.2	2026/1/10	Add component description


1. Product Overview

1.1. Product Introduction

The LF-H24 is a quad-camera pod equipped with a 50MP fixed-focus visible light camera, a 24x ultra-high-definition optical zoom visible light camera, 1280-resolution thermal imaging, and a high-precision laser rangefinder. It features a lightweight three-axis gimbal and adaptive vibration damping module, complemented by autofocus and gimbal stabilization algorithms to ensure stable and clear footage during aerial operations.

The LF-H24 utilizes an SOC processor with a neural network engine and built-in AI algorithms, capable of performing target detection and tracking in dual-light imaging. It supports display modes such as picture-in-picture and split-screen. Featuring high performance, high integration, high scalability, low cost, and low power consumption, it meets the demands of energy inspection, smart security, and forestry protection.

1.2. Component Description

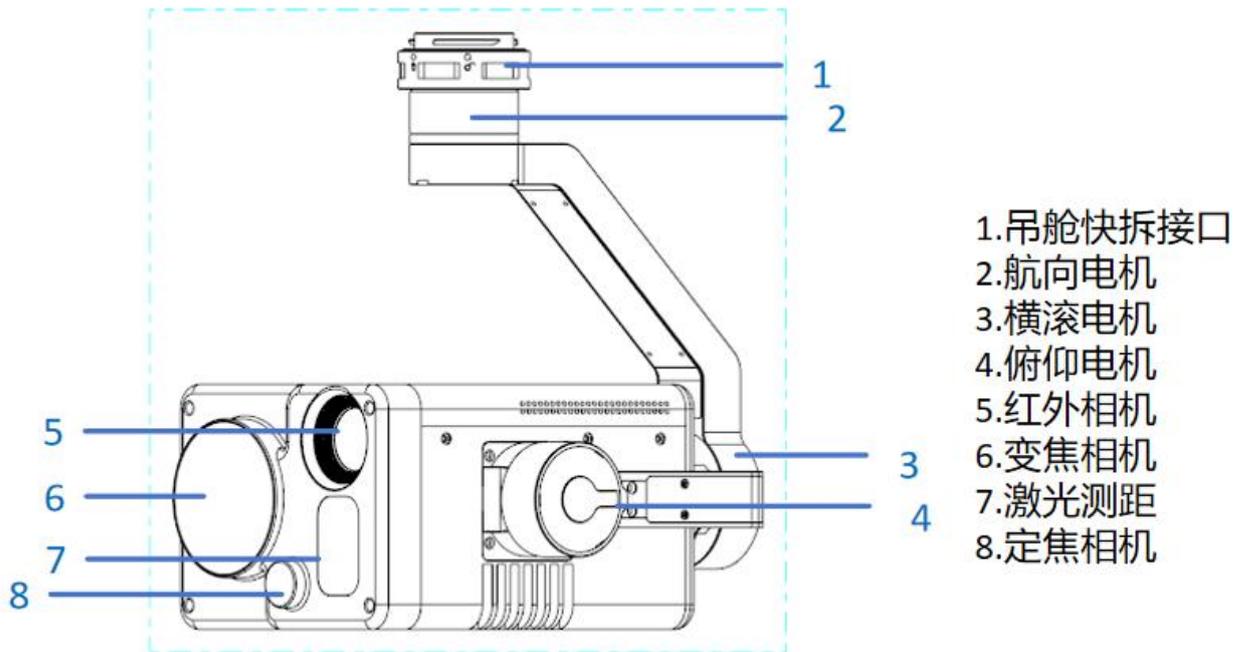

1.3. container loading list

order number	name	model	unit	quantity	remarks
1	four light pods	LF-H24	tower	1	
2	Shock-absorbing bracket with quick-release	-	cover	1	
3	explosion-proof tank	four light explosion-proof box	cover	1	

2. technical parameter

2.1. Overall parameters

video output interface	Ethernet port
control signal interface	1 S-BUS, 1 RS422, 1 100Mbps Ethernet, 1 serial port, 1 CAN
Power supply area	10V ~ 28V
System power consumption	Average power consumption: ≤15W Peak power consumption: ≤40W
levels of protection	IP54
working temperature	-20°C~60°C
Size (excluding shock absorption)	145mm×185mm×207mm
Weight (excluding shock absorbers)	less than 1200g
mechanical interface type	Quick-release & fastening hole

2.2. Zoom camera

imaging sensor	48 megapixels
Maximum photo size	8000*6000 (4:3)
Video resolution	3840×2160@30fps、 1920×1080@30fps
coded format	H.264、 H.265
Focus mode	MF、 AFS
effective focal length	7.1mm-171.95mm

equivalent focal length	38.4mm-930mm			
iris diaphragm	F1.6-F5.2			
optical zoom	24 times			
angle of field	focal distance	DFOV	HFOV	VFOV
	Wide	58.8°	48.5°	37.4°
	Tele	2.7°	2.1°	1.6°

2.3. Wide-angle camera

imaging sensor	50 million pixels
Maximum photo size	8192*6144 (4:3)
Video resolution	3840*2160@30fps 1920*1080@30fps
coded format	H.264、 H.265
effective focal length	6.55mm
equivalent focal length	23.1mm
iris diaphragm	F1.68
angle of field	DFOV86° HFOV73° VFOV58°

2.4. infrared camera

thermal imaging sensor	Non-cooling vanadium oxide infrared focal plane detector
Maximum photo size	1280*1024
Video resolution	1280*1024@25fps
coded format	H.264、 H.265
pixel pitch	12μm
wavelength coverage	8-12μm
noise equivalent temperature difference	≤ 50 mk@25°C, f#1.0

effective focal length	19mm
equivalent focal length	41.8mm
iris diaphragm	F1.0
angle of field	44.2°*35.7°
Pseudo-color	Supports 11 pseudo-color modes


2.5. laser distance measuring instrument

range	15-3000m
ranging accuracy	≤1m
operating wavelength	1535nm±5nm
range frequency	Single, 1Hz-10Hz
quasi-accuracy rate	≥98%
range resolution	≤20m
angle of divergence	≤0.65mrad

2.6. Cloud Terrace

stabilization system	3 axes (pitch, roll, heading)		
range of rotation	cabrage	roll	azimuth
	±120°	±45	±320°
stability accuracy	≤0.01°		
work pattern	Follow and Lock		

2.7. Structural shape

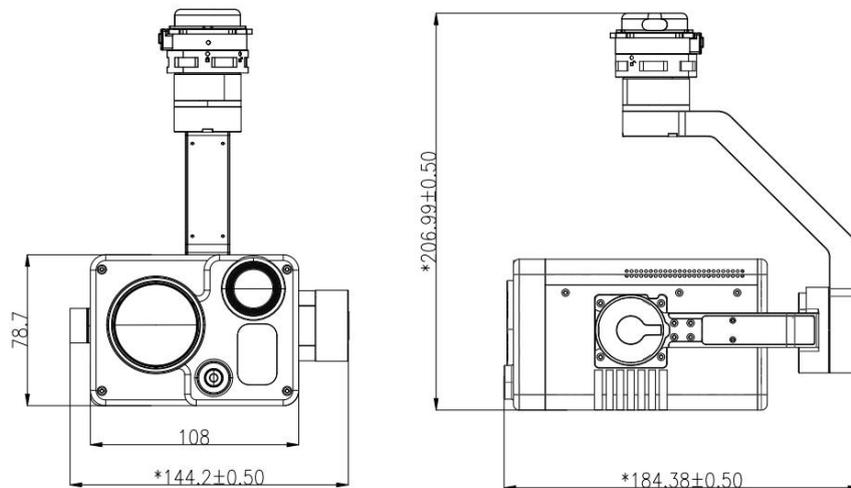

3. function Introduction

3.1. Display Mode

3.1.1. Single video display

It supports infrared, zoom, wide-angle camera single channel video display, and can switch different camera video streams.

3.1.2. Split Screen

It supports side-by-side display of two video streams from infrared panoramic and zoom cameras, and can switch between zoom and wide-angle camera video streams.

Zoom control is supported when zoom camera video stream is displayed.

3.1.3. Picture-in-picture display

Embed a smaller secondary screen into the main screen. The main screen typically displays the primary camera image, while the secondary screen shows images from other cameras. The secondary screen can be overlaid at the four corners of the main screen.

It can switch between wide-angle, zoom and infrared video channels, and the zoom camera can be controlled normally.

3.2. Photo and video recording

- Single shot: Take one photo after clicking the take button.
- Continuous shooting: Take photos at fixed intervals after clicking.
- Camera resolution: Full resolution (50MP wide-angle, 48MP zoom) and 3840*2160/1920*1080 resolution are supported for visible light photography, while 1280*1024 resolution is available for

infrared photography.

- Video recording resolution: Supports 3840*2160@30fps and 1920*1080@30fps in visible light, and 1280*1024@30fps in infrared.

3.3. visible light camera function

3.3.1. Zoom control

- Zoom: Supports up to 24x optical zoom.
- Focus mode: AF (Auto Focus) supported.

3.3.2. Dehaze Mode

- Electronic defogging: The mode supports three customizable levels (low, medium, high).

3.4. infrared camera

3.4.1. Pseudo Color Mode

- Pseudo-color mode: Supports 11 effects including White Heat, Radiant Gold, Iron Red, Rainbow, Soft Glow, Aurora, Red Heat, Jungle, Medical, Black Heat, and Golden Red.

3.4.2. gain mode

Supports two different mode options:

- High-resolution mode: Temperature measurement range-20°C to 150°C, with an accuracy of $\pm 2^{\circ}\text{C}$ or $\pm 2\%$ of the reading.
- Wide-range mode: Temperature measurement range is 0°C to 550°C, with an accuracy of $\pm 3^{\circ}\text{C}$ or $\pm 3\%$ of the reading.

3.4.3. FFC calibration

- Manual calibration: Set or retrieve the auto shutter switch, minimum shutter interval, maximum shutter interval, and auto shutter correction trigger threshold.
- Automatic calibration: When enabled, the infrared camera will automatically perform FFC calibration periodically.

3.4.4. Temperature measurement function

It supports point temperature measurement, area temperature measurement and global temperature measurement.

3.4.5. DDE

Digital enhancement technology improves image and contour clarity. Supports 0-3 DDE levels for setting or retrieval.

3.5. range measurement function



After enabling the ranging function, avoid direct eye contact with the laser to prevent potential harm.

3.5.1. range mode

- Single measurement: When enabled, it performs a single measurement and reports the distance.
- Continuous ranging: When enabled, it will measure distances continuously at a fixed frequency and report the distance information.

3.5.2. frequency selection

- It supports ranging at 1-10 Hz frequency.

3.6. Other features

3.6.1. memory card

- Supports microSD cards up to 128GB, compatible with FAT32 and ExFAT file systems.

3.6.2. watermark

- Supports custom watermarks to display load model, SN code, latitude, longitude, altitude, date, and time

3.6.3. additional function

- Reset camera parameters: Restore camera settings to factory defaults with one click
- Auto-save camera settings: Save user-defined settings by default. The camera will automatically use the last saved settings when you reopen it.
- OSD customization: Supports OSD customization.

3.7. Pan-Tilt Function

3.7.1. pan-tilt control

- One-click return: Quickly resets the gimbal to its original center position, aligning with the camera's orientation.
- One-click downward: Quickly rotates the gimbal vertically downward.

3.7.2. pan-tilt control mode

- Follow: The pod's orientation remains constant relative to the nose.
- Lock: The pod's orientation remains fixed and does not rotate with the aircraft's nose.
- Panning: The gimbal rotates around each axis by small angles through commands sent from the host computer.
- Manual: Control the pan-tilt rotation with up, down, left, or right commands.
- Speed control: The pan-tilt unit automatically adjusts rotation speed according to zoom ratio.

3.7.3. automatic drift correction


- The PTZ automatically calibrates drift during operation, correcting attitude deviations caused by hardware errors, environmental interference, or prolonged use. This ensures stable and precise

posture control, thereby enhancing both the image quality and operational reliability of filming or surveillance.

4. Photoelectric Pod Operation Instructions

4.1. Structural Installation Instructions

- Remove the protective cover from the gimbal interface, then align the white dot on the pod's quick-release connector with the red dot on the aircraft's gimbal interface for connection.
- Rotate the pod connector clockwise to the locked position (align the pod with the quick-release counterpart's red dot) to secure it.

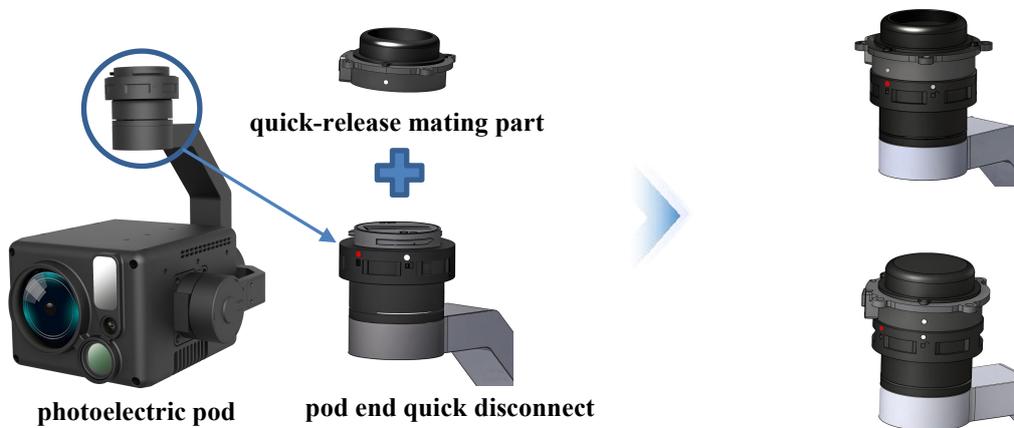

- ✧ To remove or replace the pod, press and hold the quick-release button on the component/aircraft, then rotate counterclockwise to detach the pod.

4.2. Signal line description

4.2.1. 30-pin signal line pin definition

order number	definition	explain	Wiring harness color	remarks
1	GND	GND	black	
2	USB-DP	USB-DP	green	
3	USB-DN	USB-DN	yellow	
4	GND	GND	black	
5	PPS	PPS	green	Accurate Time Synchronization time lock
6	CAN-P	CAN-P	green	
7	CAN-N	CAN-N	yellow	
8	GND	GND	black	
9	GND	GND	black	

10	SBUS	SBUS	green	
11	GND	GND	black	
12	RS422-RX-N	RS422-RX-N	yellow	
13	RS422-RX-P	RS422-RX-P	green	
14	RS422-TX-N	RS422-TX-N	yellow	
15	RS422-TX-P	RS422-TX-P	green	
16	VBAT	VBAT	red	10V ~ 28V
17	VBAT	VBAT	red	10V ~ 28V
18	VBAT	VBAT	red	10V ~ 28V
19	VBAT	VBAT	red	10V ~ 28V
20	GND	GND	black	
21	GND	GND	black	
22	GND	GND	black	
23	232-UART-RX	232-UART-RX	yellow	Input/3.3V
24	232-UART-TX	232-UART-TX	green	output /3.3V
25	LAN-RX-N	LAN-RX-N	yellow	
26	LAN-RX-P	LAN-RX-P	green	
27	LAN-TX-N	LAN-TX-N	yellow	
28	LAN-TX-P	LAN-TX-P	green	
29	GND	GND	black	
30	HIGHT-PWR-REQ	HIGHT-PWR-REQ	green	high power request

Note: The signal line number is the sequence number marked on the harness.

5. external communication protocol

Supports RTSP streaming. Contact sales or after-sales for details.

6. Host machine tool

You can contact sales or after-sales for relevant information.

7. matters need attention

7.1. maintenance overhaul

7.1.1. Daily Use and Cleaning

- Dustproof and dirtproof

Avoid contaminating the lens with chemicals or oil during use. Clean the lens surface immediately

after use with a lens cloth.

Direct wiping of optical lenses with hands or rough fabrics is prohibited. It is recommended to use professional lens cleaning kits or clean cloths and alcohol for cleaning.

- Moisture-proof and waterproof

Avoid prolonged use in rainy, snowy, or high-humidity environments. If exposed to damp conditions, wipe the surface with a dry soft cloth after operation and store in a dry environment.

Do not soak or rinse the device directly.

- collision and vibration protection

During transportation or storage, place the pod in the factory-provided explosion-proof box and keep it securely fixed to avoid violent shaking or dropping.

Do not impact the lens with sharp or hard objects, as this may cause damage and affect its performance.

7.1.2. matters need attention

- Do not disassemble by yourself

Non-professionals must not disassemble the pod's core components (e.g., optical modules or circuit boards), as doing so may cause damage or void the warranty.

- exception handling

If the device exhibits abnormal overheating, unusual noises, or image distortion, stop using it immediately and contact after-sales technical support.

Do not force the device to start in a faulty state.

7.2. Usage Notes

7.2.1. Preparation before use

- Environmental inspection

Maintain the operating environment temperature within -20°C to 55°C , and avoid areas with strong electromagnetic interference.

The use is prohibited during severe weather conditions such as rain, snow, and sandstorms.

- equipment inspection

Check the pod for damage, the lens for stains, and the gimbal for smooth rotation without noise.

Inspect the mechanical structure of the flywheel gimbal for looseness. If any abnormal response is detected, immediately deactivate and perform maintenance.

Check the electrical connections of the system.

Check the normality of the gimbal imaging and function.

7.2.2. Usage Notes

If there are any abnormal situations such as abnormal picture or abnormal control of the pan-tilt unit during the operation, the operation task should be stopped and returned to the ground for inspection.

7.2.3. Post-processing

After use, the system must be powered down before removing the pod from the aircraft.

After cleaning the lens, it was put back into the packaging box.